


Givarkort interna kopplingar
Sensor Board internal couplings

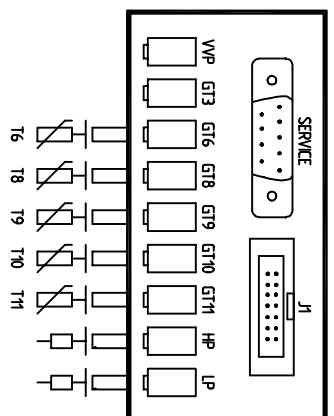

- T6: Kompressor / Compressor
- T8: Värmebärare ut / Heat transfer fluid out
- T9: Värmebärare in / Heat transfer fluid in
- T10: Köldbärare in / Heat transfer fluid (cold) in
- T11: Köldbärare ut / Heat transfer fluid (cold) out
- HP: Pressostat högt / High pressure switch
- LP: Pressostat lågt / Low pressure switch

- MB1: Motorskydd kompressor / Motor circuit compressor
 - CK1: Kontaktor kompressor / Contactor compressor
 - CE1: Kontaktor Elkassett 1 / Contactor electric heater 1
 - CE2: Kontaktor Elkassett 2 / Contactor electric heater 2
 - F1: Autوماتisk Värmepump / Circuit breaker heatpump
 - F2: Autوماتisk elkassett / Circuit breaker electric heater
 - ØH: Överhettningsskydd elkassett / Overheat circuit electric heater
 - Cr: Driftkondensator / Run capacitor
 - Cs: Startkondensator / Start capacitor
 - R: Startheld / Potential relay
- *) MS: Mjukstart, tillbehör
Softstarter, accessories



IVT Greenline E5-E9 230 V		
Kretsschema / circuit diagram		
DATUM	RITAD AV	BLAD
2004-01-12	MK	1

Inkommande matning
Power supply
230VAC

Elkassett
Electric heater
9 kW (3kW+6kW)